



Installation Instructions

12-port water actuator valve controller

Description

The DuoValve configuration is a 12 port controller consisting of one (1) – 2 port and two (2) – 6 port water actuator valves. The DuoValve was designed for larger pools, where more than six zones may be required.

Installation Options

Option #1

The 2 port valve (shown as the center valve) should be plumbed at the same elevation as valve A and valve B. It is important to use 2.5 inch PVC pipe and fittings between the 2 port valve and valves A & B

Option #2

The 2 port valve (shown as the center valve) must be plumbed with sweep 90° elbows. If sweep 90° elbows are unavailable or not used, use option #1.

